
Assembly Instruction


2020 Edition




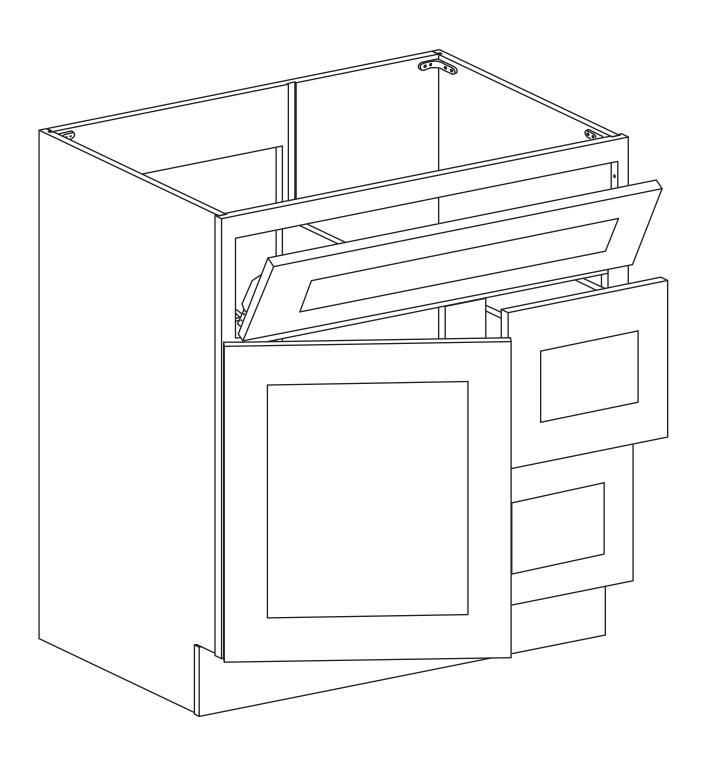

Vanity Sink Cabinet

Item Code: FA3021DL, FA3021DR

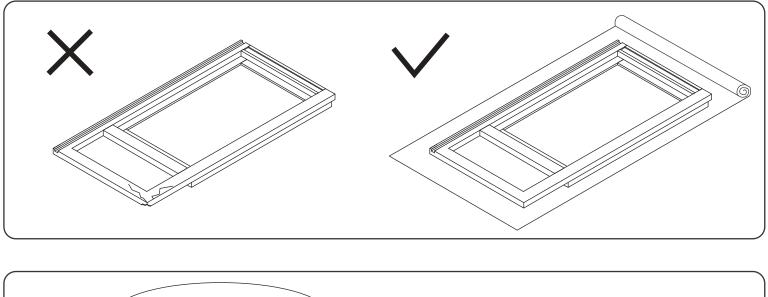

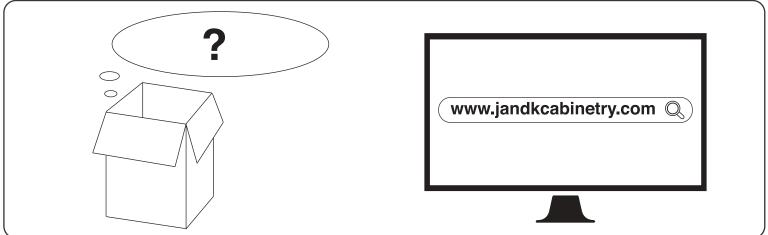



WARNING:


- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.




SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items: Mid Panel **Back Panel** Front Door Frame Tilt-Out Drawer Drawer Back (X2) Drawer Side (X4) Side Panel (X2) Door Panel **Bottom Panel** Drawer Front (X2) Toe Kick Drawer Bottom (X2) 1/2" 19/32" 1-3/16" X (X)

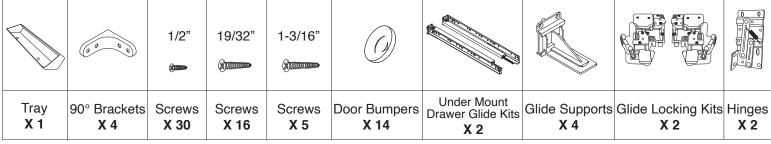

Recommended Tools:

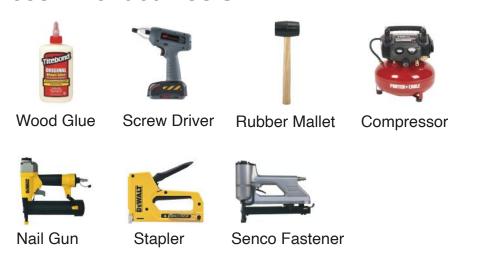

Safety Tools:




Eye Wear




Gloves


Step 1:

Step 2:

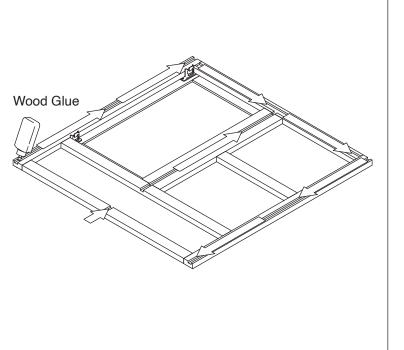


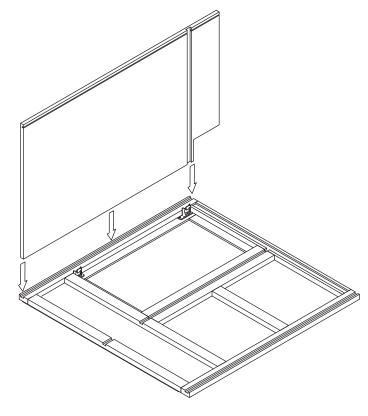


Step 3:

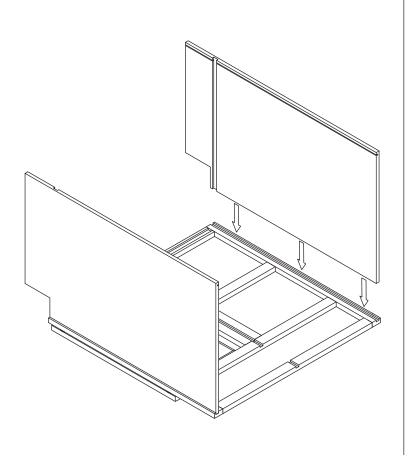


Step 4:

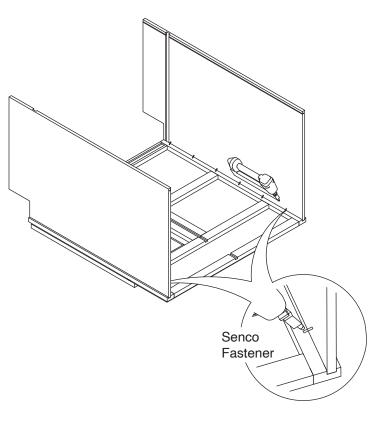


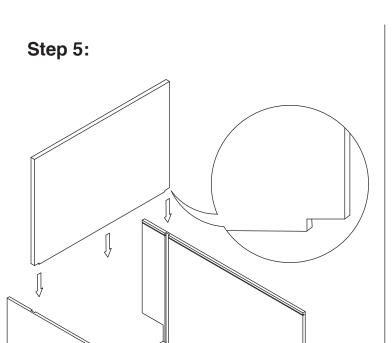


Step 6:

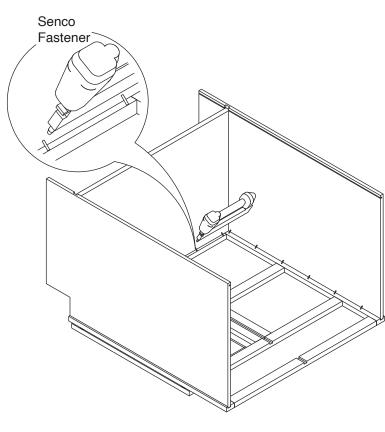


Step 7:

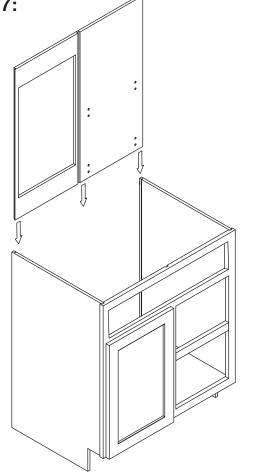


Step 8:

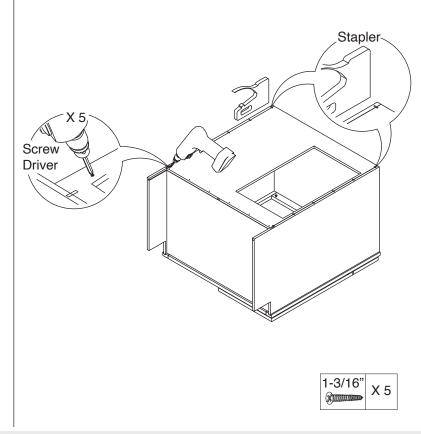


Step 9:

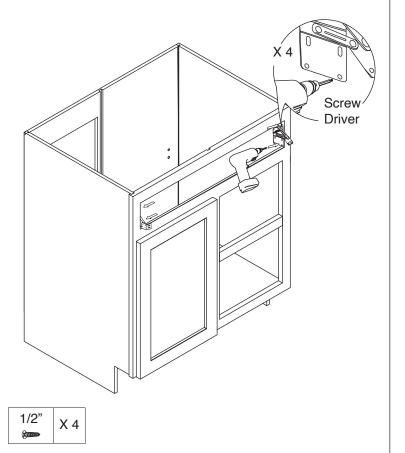


Step 10:

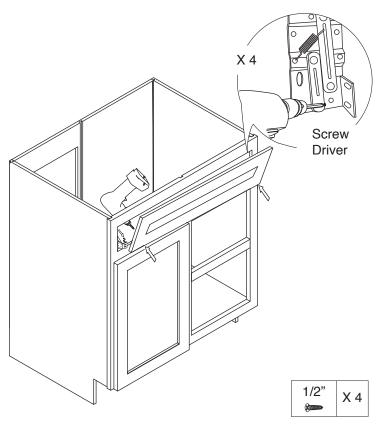


Step 11:

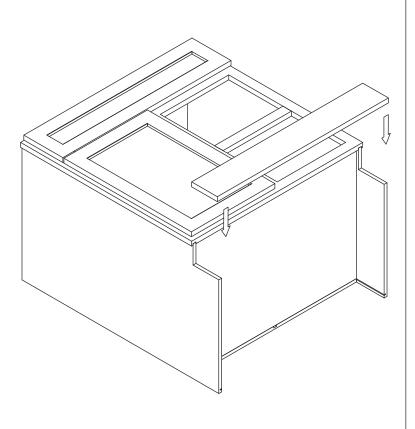


Step 12:

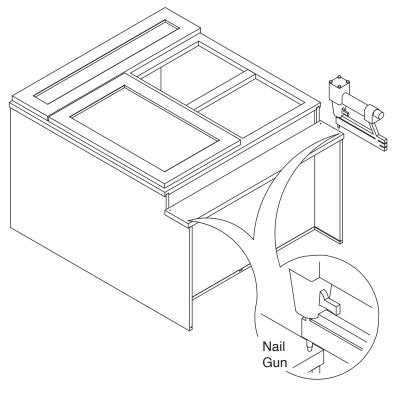


Step 13:

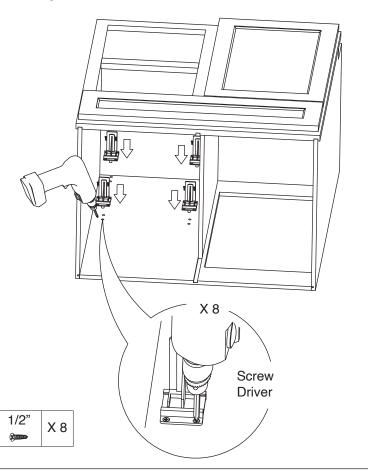


Step 14:

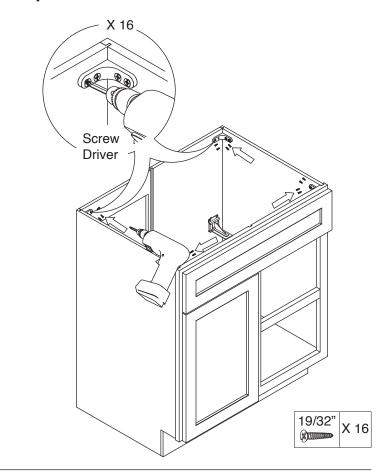

Step 15:

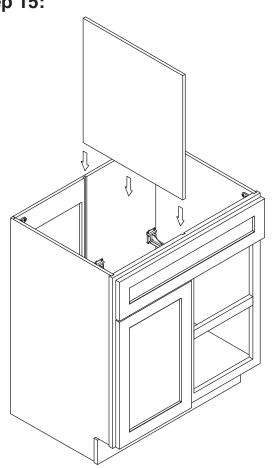


Step 16:

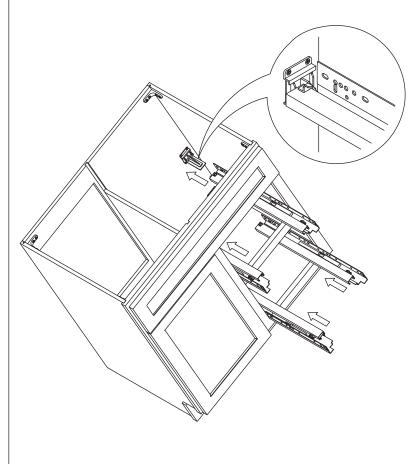

Step 17:


Screw Driver



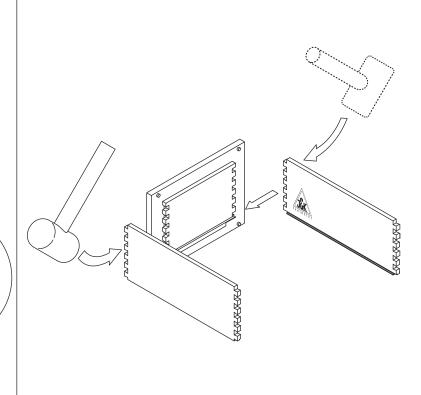



1/2" X 4


Step 19:

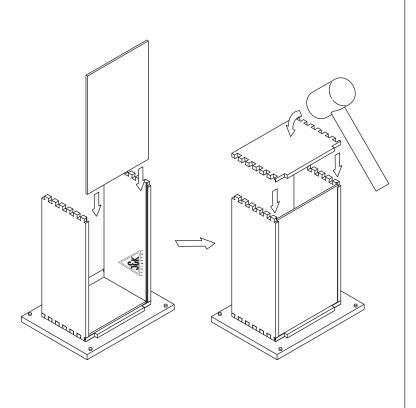

Step 20:

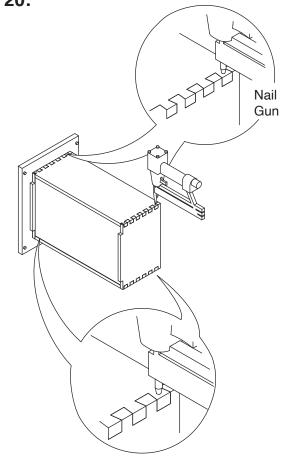


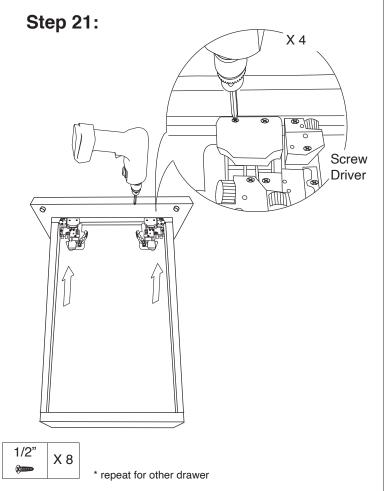


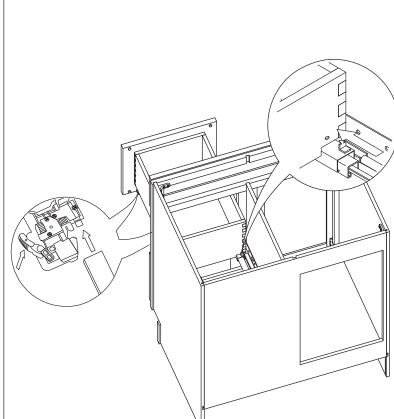

Step 22:

Step 24:

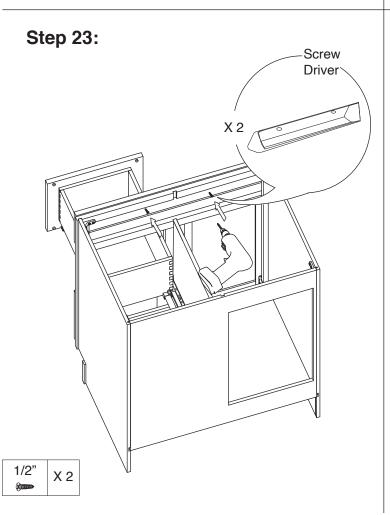

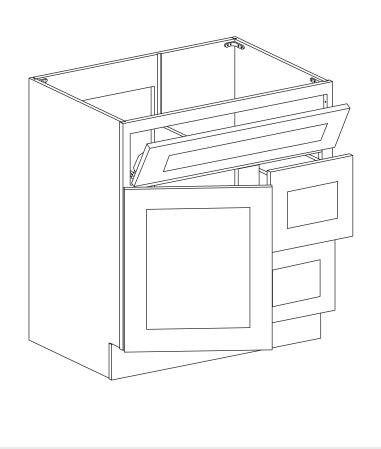

Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.