

Assembly Instruction







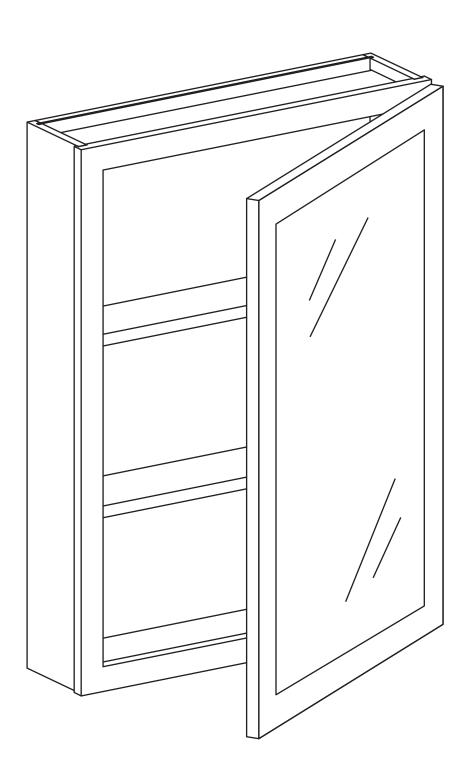

Vanity Mirror Cabinet

Item Code: SVAM24336, SVAM30336

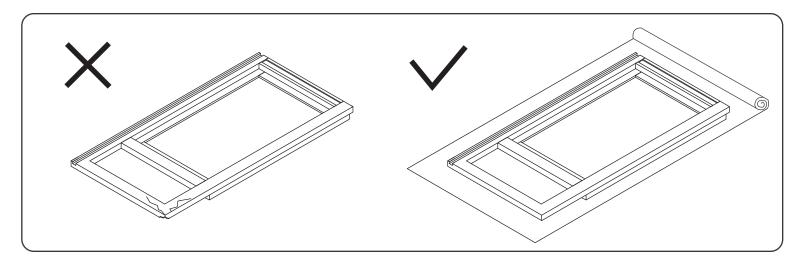

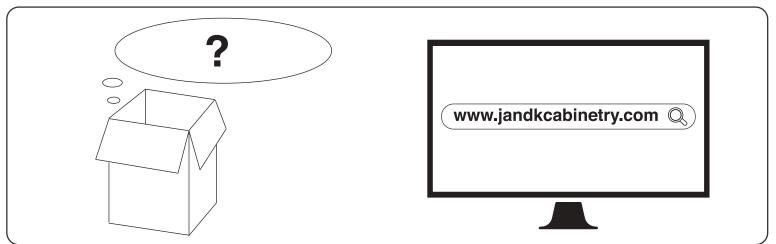


WARNING:

- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.

SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

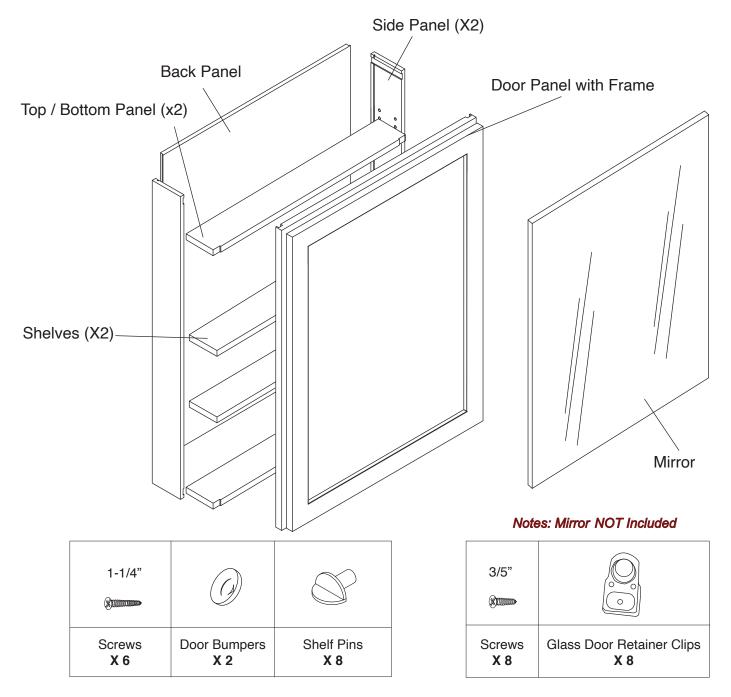

Recommended Tools:




Safety Tools:




Eye Wear




Gloves

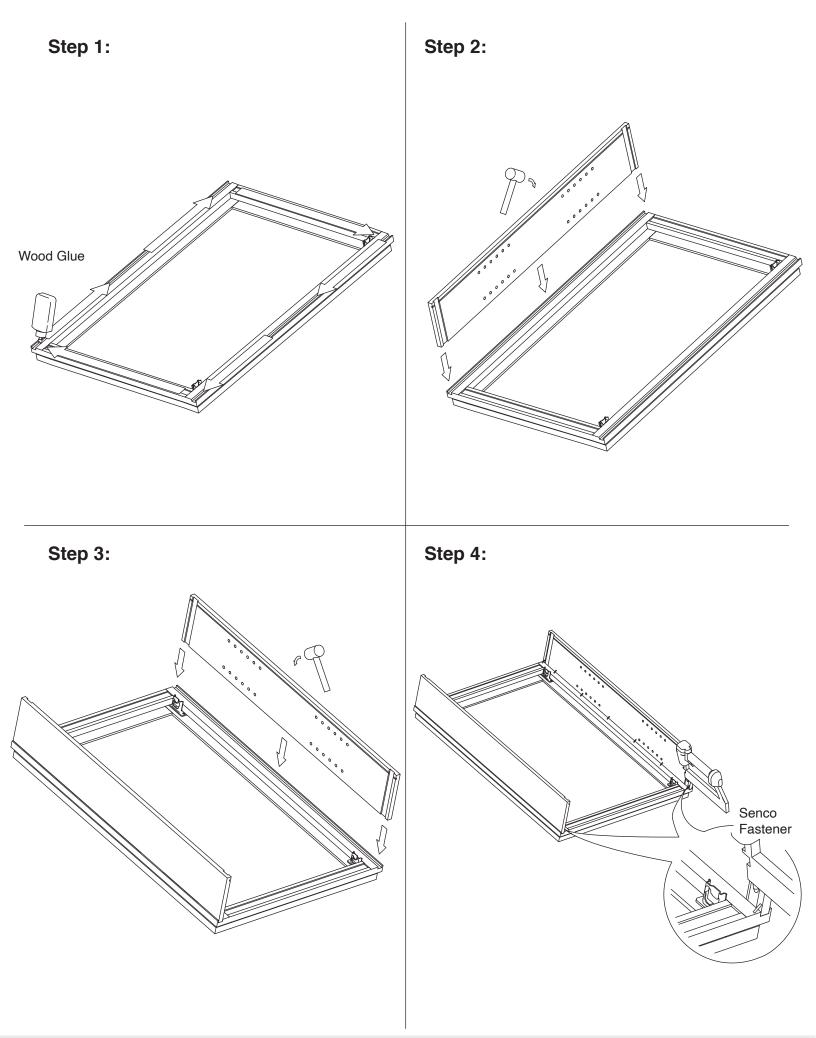


Step 5:

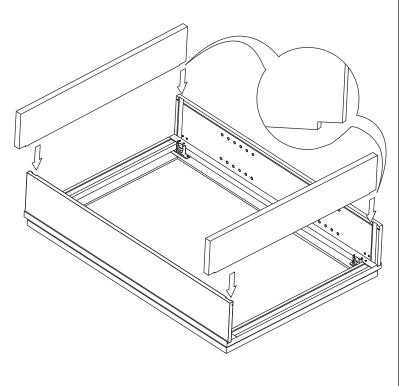


Step 6:

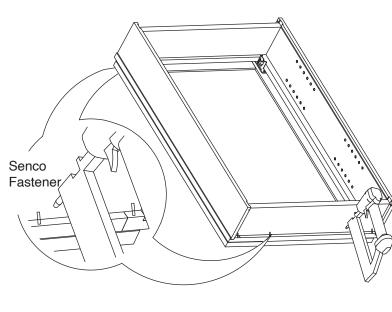


Step 7:

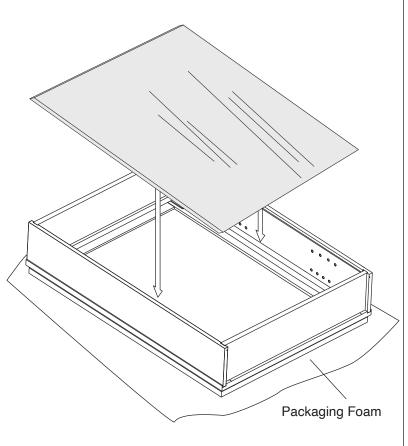


Step 8:

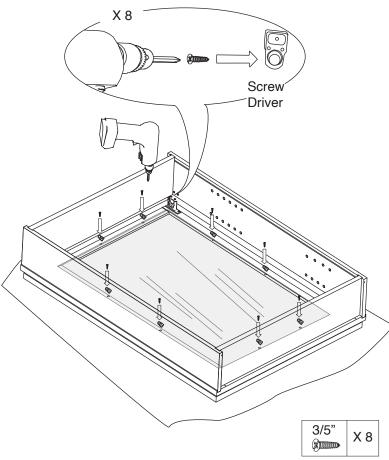


Step 9:

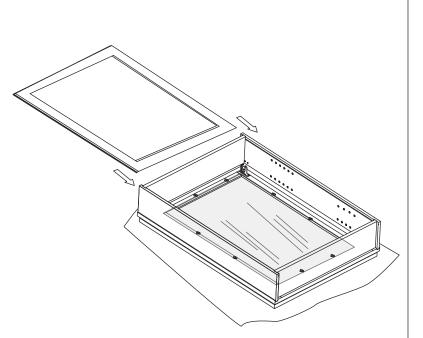

Step 10:

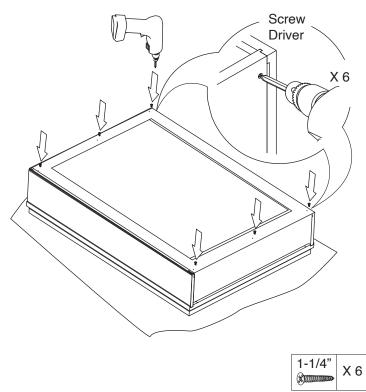

Step 11:

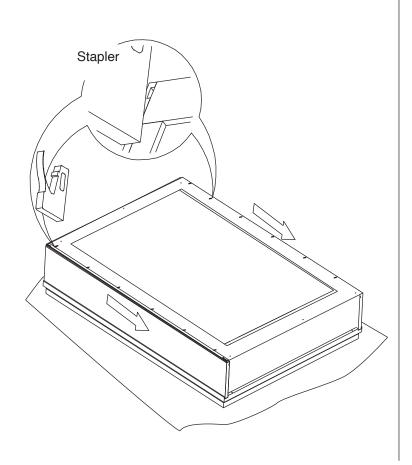

Step 12:

